

EN

Register your product guarantee today!
See page 18 for info.

TW

請立即進行產品註冊以啟動產品保固，
詳情請見第 18 頁

ghd chronos curve

important safety instructions,
manufacturer's guarantee and
how to register your product

**重要安全使用守則·
產品註冊與保固**

contents	
內容	
EN English	3 - 10
Validate your guarantee	18
TW 中文	11 - 15
啟動產品保固註冊	18

important safety instructions

To reduce the risk of burns, electrocution, fire, or injury to persons, read and follow these safety instructions before using your ghd chronos curve.

Your ghd chronos curve is for use only as a hairstyling aid, and only with appliances specifically designed for use with a heated hairstyling aid such as a heat resistant mat.

handling your ghd chronos curve

ghd chronos curve contains high tech sensitive components therefore please ensure that the appliance is not dropped. Do not insert foreign objects, paint, burn or disassemble your ghd chronos curve. Do not use your ghd chronos curve if it has been damaged – for example if the casing is cracked. If your appliance is damaged through misuse or abuse, this will not be covered under your guarantee. Jemella Ltd will replace the product free of charge only if it is within warranty. This does not affect your statutory rights.

This appliance is not intended for use by persons (including children) with

reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance. Cleaning and user maintenance shall not

be made by children without supervision

BURN HAZARD: Keep appliance out of reach from children, particularly during use and during cool down after use.

When the appliance is connected to a power supply never leave it unattended.

Always place the ghd chronos curve down using

the built-in safety stand, on a heat resistant, stable flat surface.

ghd chronos curve is not suitable for use with synthetic hair.

warning: keep away from water

Do not use this device in a bathtub, shower, or water filled reservoir.



1. When the appliance is used in a bathroom, unplug it after use since

the proximity of water presents a hazard even when the appliance is switched off.

2. For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30mA is advisable in the electric circuit supplying the bathroom. Ask your

installer, or a qualified electrician, for advice.

3. Do not reach for the appliance if it has fallen into water

4. Do not spray or apply wet styling aids directly onto the ghd chronos curve.

warning: electricity

As with most electrical appliances, electrical parts are electrically live even when the switch is off.

To reduce the risk of electrocution:

Never operate this appliance if it is not working properly, or if it has a damaged power cord or plug. If the power cord or plug is damaged, it must be replaced by Jemella Ltd.

1. Only use with 100–240V, 50-60 Hz power supply.
2. The appliance should never be left unattended when plugged in.
3. Keep the power cord away from heated surfaces. Do not wrap the power cord around the appliance. Do not hang the ghd chronos curve by the power cord.
4. Always unplug the ghd chronos curve immediately after using.
5. Do not use an extension power cord with this appliance.
6. Do not use a voltage inverter or generator with this appliance.

7. Your ghd product is a class II electrical appliance and does not need be connected to an earth connection.



warning: hot surfaces


The ghd chronos curve barrel is hot for effective styling.

To reduce the risk of burns:

1. NEVER touch the heated barrel.
2. When not styling always place the ghd chronos curve down using the built-in safety stand on a flat heat-resistant surface such as a ghd heat mat.
3. When styling is complete, always switch off the ghd chronos curve and unplug it from the power supply.
4. Wait for the appliance to cool before storing.
5. After styling the barrel remains hot – place the appliance on a ghd heat resistant mat using the built-in safety stand.
6. When your ghd chronos curve has cooled, fold the power cord in the same way as it was first delivered in its packaging. Do not wind it around your hand or the barrel or handle of the ghd Chronos curve as this can lead to early failure of the power cord.
7. Always place the appliance with the stand, if any, on a heat-resistant, stable flat surface.

operation

Ensure that hair is completely dry before using the ghd chronos curve appliance.

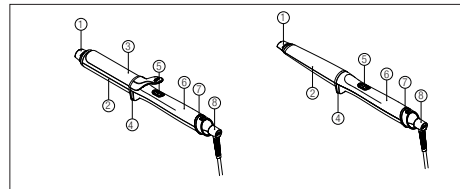

1. Cool tip
2. Barrel
3. Lever (tong only)
4. Stand
5. ON/OFF Switch
6. Handle
7. Rear light
8. Power cord

1. Plug the ghd chronos curve into the power supply. The ghd chronos curve will bleep and momentarily flash once around the ON/OFF switch and at the rear light to indicate that it is connected to a power supply and is in standby mode.
2. To turn on the ghd chronos curve, slide the ON/OFF switch into the ON position. The ghd chronos curve will play a short start-up tune and both lights will pulse to indicate that the curler is heating up.
3. IMPORTANT: the ghd chronos curve reaches the required temperature in seconds, so be careful not to touch the hot appliance barrel! Once the ghd chronos curve has reached temperature, it will bleep and both lights will remain illuminated to indicate that it is ready to use.
4. When you have finished your styling session, slide the ON/OFF switch to the OFF position to turn the appliance off. A shut down tune will play to indicate the appliance has been turned off. Once turned off, it is best practice to unplug the appliance from the mains electricity and allow it to cool in a safe place. For safe cooling, place the appliance on a ghd heat resistant mat using the built-in safety stand and allow to cool.

WARNING: while the appliance is cooling down do not touch the barrel or allow children or those with reduced physical, sensory or mental capabilities, or lack of experience and knowledge to touch the appliance whilst it is cooling.

Your ghd chronos curve is not only attractive to you

but also to your children. Please ensure you always store your ghd styler out of reach of children, particularly during use, especially when cooling.

ghd chronos curve has the following safety features:

1. **Sleep mode:** if the ghd chronos curve has been left on and has not been used for 20 minutes, a safety feature will automatically turn the curler off. The curler will play the sleep mode tune, the barrel will start to cool and both lights will slowly pulse till the barrel reaches a safe temperature.
 - a. To restart the appliance while it is in sleep mode, simply turn it OFF and ON again until the start-up tune sounds.
 - b. Note that although ghd chronos curve is turned off, it is still connected to the mains and should be unplugged from mains electricity at the earliest opportunity.
2. **Protect Mode:** The ghd chronos curve can protect itself against adverse events or power fluctuations, for safety the heaters will turn off, the ghd curler will emit a bleep and both lights will flash white every five seconds. If this occurs un-plug and re-plug at the power supply and then re-start.

3. **Fail safe:** in the unlikely event of a control system error, for safety the heaters will turn off, the ghd chronos curve will emit bleeps and the light around the switch will flash red every five seconds. If this occurs un-plug and re-plug at the power supply and re-start. If the unit does not re-start or the problem persists, contact ghd Customer Service for advice.

user maintenance instructions

Cleaning your ghd chronos curve

1. Unplug ghd chronos curve from the mains power supply.
2. Always allow ghd chronos curve to cool before attempting to clean it.
3. Never immerse the appliance in water.
4. Wipe the handle and barrel of the appliance with a damp cloth. Do not use sharp or abrasive detergents or corrosive products.

Storage

1. Always allow your ghd chronos curve to cool down before storing away.
2. When the appliance has cooled down, fold the power cord in the same way as it was first delivered in its packaging. Do not wrap the supply cord around the appliance as this can strain the cord and cause premature supply cord failure.

failure to operate

Your ghd styling appliance is a high-performance product and if the unit is subjected to large fluctuation in mains power during use, it may go into fail-safe mode to protect the unit from damage. Therefore, in the unlikely event that your ghd appliance does not operate correctly, check that your ghd appliance and mains power supply are switched on, and that power is available.

If your product stops working and the red fault light flashes, please follow the procedure below:

- 1. Switch off the unit
- 2. Unplug the unit from the plug socket
- 3. Wait for 5 seconds and then plug the unit back into the wall
- 4. Switch the unit back on

If this occurs repeatedly, please contact your local ghd service centre.

For UK plugs, please ensure that the fitted fuse is intact and functioning; if it is not, replace it with an identically rated British Standard Fuse.

If in doubt or for further advice, please visit the help section of ghdhair.com or contact an approved ghd stockist or contact ghd customer services for further advice.

manufacturer’s guarantee

All ghd electrical products are individually tested before leaving the factory. However, in the unlikely event of the product proving defective due to faulty workmanship or materials, then, at its sole discretion, ghd will replace the product at no charge with an identical or equivalent product within two years from the original date of purchase. A replacement product assumes the remaining guarantee of the original product or 180 days, whichever provides longer coverage for you. When a product is exchanged, any replacement item becomes your property and the replaced item becomes property of ghd.

To claim under this guarantee please visit ‘ghdhair.com/returns’ and follow the onscreen instructions to complete your return. Please ensure that you include a proof of purchase with any returned product. Therefore, please ensure you keep your proof of purchase in a safe place.

This guarantee only applies to genuine ghd products purchased through ghd-approved stockists, and does not cover products repaired or serviced by anyone other than ghd personnel or ghd representatives. Note that this guarantee may be invalidated where serial numbers or identification have been erased, damaged or modified. This does not affect your statutory rights.

Neither Jemella Group Limited nor its subsidiaries provide replacement parts for any of its electrical units. If you do not have access to the internet, please return your ghd electrical product to the closest ghd address as printed in this leaflet or on the packaging, together with your proof of purchase. For customers in Australia and New Zealand, please phone your closest ghd office on the number printed in this leaflet.

Australia Only

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

recycling and disposal

Your ghd electrical product is classified as ‘electrical or electronic equipment’ and **must not be disposed of with other household or commercial waste at the end of its working life**. When you have no further use for your ghd product, please dispose of it according to your local authority’s recycling procedure. For more information contact your local authority.

UK/EU only

Your ghd electrical product should be disposed of in accordance with the WEEE directive (Waste Electrical and Electronic Equipment 2002/96/EC) which ensures that products are recycled using the best available methods and practices to minimise any potential damage to the environment. For more information, contact your local authority or the retailer from whom you purchased this product.

compliance

ghd chronos curve is compliant with EN 60335-2-23 and carries the CE mark. Other approvals include the USA, Australia/New Zealand and South Africa.

Salon Driver Co. Ltd

For information, please call: +886-2-8786-9198

Salon Driver Co. Ltd

is an approved distributor of ghd/Jemella Group Limited in Taiwan, located in 3F, No.1, Songgao Rd., Taipei 110

Jemella Ltd

ghd UK

ghd UK: 0845 330 1133
ghd Republic of Ireland: +44 1924 423 400

ghd Returns

Phase 3 (Chilton House)
Sherwood Park
Annesley
Nottingham
NG15 0DJ
UK

ghd South Africa

ghd South Africa: 086 010 9366

ghd South Africa (Pty) Ltd

PO Box 818
Gillitts
3603
South Africa

ghd Australia

ghd Australia: 1300 443 424

Jemella Australia Pty Ltd

ghd Australia
PO Box 15516
City East
Queensland 4002
Australia

ghd New Zealand

ghd New Zealand: 0800 880 209

Jemella New Zealand Ltd

ghd New Zealand
Private Bag 211030
Laurence Stevens Drive
Auckland 2154
New Zealand

EN



ghdhair.com

ghd and ghd are registered trademarks of Jemella Group Limited.

© Jemella Group Limited 2024

chronos curve

Designed in Cambridge, UK. Made in China.

Patent pending

重要安全使用守則

為避免錯誤操作而導致燙傷、觸電、火警及其它個人傷害，使用本產品前請認真閱讀及遵照以下安全說明。

本產品僅只適用於頭髮造型使用，並且只適用於搭配專為造型工具特別設計的耐熱產品，如ghd的隔熱收納袋一起使用。

ghd chronos curve操作方法

ghd chronos curve 產品內裝高精密感應零件，請勿碰撞或摔落產品；同時切記禁止異物插入、塗畫、烙印或拆裝產品。若產品被毀損，例如表面產生裂痕時，請立即停止使用。任何人為使用不當或濫用所導致的產品故障，將不列入產品保固的範圍。使用前請先檢查產品是否正常，若有任何毀損或不正常的情况，請停止使用，並由ghd台灣總代理派力國際股份有限公司於保固期內進行保固退換。這將不影響你的法律權益。

本產品不適合兒童及肢體、感官或精神上有殘疾者、或缺乏經驗和知識的

對象使用，除非在專人指導或監督，且對使用者安全承擔責任的情況下方能使用。

請監督兒童，確保不會把本產品當作玩具。本產品在缺乏監督的情況下，不得由兒童進行清潔及維護。

燒傷危險：請將本產品放在兒童接觸不到的地方，特別是在使用過程中和使用後的冷卻過程中。

在無人看管的情況下，請將本產品的插頭拔除。切勿連接電源。

請使用本產品內建之安全底座，並置於耐熱表面上，如ghd隔熱袋。

本產品不適用於人造假髮。

警告: 請遠離水源

不要在浴室、浴缸、洗臉盆或任何可能接



觸到水的地方使用本產品。

1. 當電器在浴室中使用時，請在使用後拔掉電源插頭，因為即使關閉電源，任何可能接觸到水的地方也會產生危險。(台灣地區禁止在浴室或任何能接觸到水的地方使用電器)

2. 額外的保護措施，建議可安裝定格漏電電流30mA以下的殘留電流檢

測器(RCD)。(請務必依照您當地的相關規範)請諮詢您的安裝人員或合格的電工，以獲得建議。

3. 萬一產品不小心掉入水中時，請勿再觸碰。

4. 請勿將任何造型或護髮產品直接噴灑或塗抹在本產品上。

警告: 小心觸電

如同多數的電器產品，即使開關已被關閉，部份零件仍為處於待機通電狀態。

為降低觸電危險：

如電源線或插頭有損壞，或產品不正常運行時，請立即停止使用。並於保固期內，請總代理商派力國際股份有限公司進行產品保固服務。

1. 請依照產品標示規格使用電源。
2. 無人看管時，應拔掉插頭。
3. 請勿將電源線放置於任何有熱度的表面。請勿將電源線纏繞於本產品上或用電源線懸掛本產品。
4. 每次使用完後請立即拔掉插頭。

- 請勿將本產品與電源延長線一起使用。
- 請勿將本產品與電壓轉換器或電源變壓器一起使用。
- 本產品為II類電器，不需接地使用。



警告：小心熱表面


為有效達到造型效果，使用過程中產品會產生高溫。

為防止燙傷或灼傷：

- 請勿用手觸摸加熱管。
- 當中途停止操作時，請使用本產品內建之安全底座，並置於耐熱表面上，如ghd隔熱墊。
- 當使用結束後，請關閉開關並拔掉插頭。
- 使用完畢時，請待完全冷卻後再進行收存。
- 造型完畢後，由於產品本身仍具高溫，請使用內建之安全底座並置放於隔熱墊上。
- 待冷卻後，請依原包裝方法收納電源線。請切勿將電源線纏繞於手上或機身上，這將可能造成電源線提早損壞。
- 請使用本產品內建之安全底座，並置於平穩且耐熱的表面上。

操作方式：

使用本產品前，請確保頭髮已全乾。

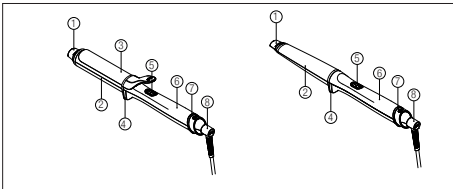

- 防熱頂端
- 發熱管
- 管夾(限造型棒系列)
- 底座
- ON/OFF滑動開關鍵
- 握把
- 尾燈
- 電源線

- 將ghd chronos curve 的插頭插入電源插座。電源開關處會快速發出閃光，表示已連接電源，此時本產品已處於待機模式。

- 將開關鍵滑動到ON(開)的位置即可啟動預熱，同時將會發出很短的啟動聲響，接著電源指示燈與尾燈都會持續閃爍，這表示本產品正在加熱。
- 重要：ghd chronos curve 在短短幾秒內即可預熱完成，因此千萬注意不要觸摸發熱管！一旦預熱完成，會發“嗶嗶”聲，同時電源指示燈與尾燈將保持在亮燈模式，此時即可開始使用。
- 使用完畢時，將開關鍵滑動到OFF(關)的位置以關閉本產品。關閉電源後請立即拔掉插頭，並妥善放置等待冷卻。為確保安全，請在冷卻時，請使用產品內建之底座並置於隔熱墊上靜待冷卻。

警告：使用完畢後，請勿於冷卻時觸碰到發熱管，並且避免接觸兒童以及肢體、感官或精神上有殘疾者或缺乏經驗及知識者。

我們相信本產品不僅會引起你的興趣，同時也會引起小孩的好奇心。請務必將本產品放置於兒童接觸不到之空間，尤其是在使用時，特別是在冷卻過程中。

ghd chronos curve具有下列安全特徵：

- 睡眠模式：ghd chronos curve在啟動狀態下若超過20分鐘未使用，本產品會發出聲響並自動關閉開始進入睡眠模式，接著發熱管會開始進行冷卻，同時兩個燈皆會慢速閃爍。
 - 若進入睡眠模式後欲重新啟動本產品，只需將其關閉(OFF)並再次開啟(ON)，直到聽到啟動音為止。
 - 注意：即使本產品開關已關閉，由於仍然連接電源，為確保安全，請儘快拔掉插頭。
- 防護模式：ghd chronos curve 具有自身防護機制，在接收到不穩定電流或功率的狀況下，系統會自動關閉加熱功能，並發出嗶嗶聲，同時兩個燈每隔5秒閃爍一次。如果發生這種情況，請拔下電源插頭，然後重新啟動。
- 故障保護：若不幸遇到控制系統失靈，基於安全考量，發熱器會自動關閉，會發出急促的“嗶”聲，同時電源指示燈會以紅光的方式每五秒持續閃動一次。此時可以先關機再重新啟動電源。若無法重新啟動電源或狀況持續發生無法改善，請洽ghd客戶服務部尋求協助。

產品維護說明

ghd chronos curve 清潔須知

- 清潔前，必須關閉電源及拔掉插頭。
- 清潔前，請確保ghd chronos curve已經完全冷卻。
- 請切勿將產品浸入水中。
- 請使用濕棉布清潔握把及發熱管表面，並立即抹乾。切勿使用具腐蝕性的清潔劑，以及使用尖銳或粗糙材質擦拭本產品。

存放須知

- 使用完畢後，須待冷卻後再存放。
- 待冷卻後，請按原包裝方法收納電源線。請勿將電源線纏繞於機身上，以防止過度拉扯電源線所導致的提早損壞。

操作故障

由於本產品為精密儀器，若在使用時電流量落差太大時，產品會即刻進入故障保護模式以保護產品避免受損。因此，若本產品未能正常運作，請確認電源開關是否開啟，電力是否正常供應。

若產品無法正常操作，電源紅色指示燈不斷閃動時，請按照以下流程操作：

- 關機
- 拔下插頭
- 等待5秒後再重新將插頭連接插座
- 開機

若經常出現操作故障的情況時，請洽ghd客戶服務部

若有其它疑問，請前往www.ghdhair.com網站或聯絡總代理商派力國際股份有限公司尋求協助。

產品保固

所有ghd產品在出廠之前都經過嚴格品質檢驗。自購買日起2年內，產品若有任何生產過程或原料所導致的瑕疵問題，在經過判斷認可下，ghd 將提供保固，免費替換相同或等價之產品。替換產品的保固期將延續原產品的保固期或180天（以較長的週期為準）。當產品被替換後，替換產品所有權將歸於您而被替換產品所有權將歸於ghd所有。

若需尋求保固，請洽詢總代理商派力國際股份有限公司。聯絡電話：+886-2-8786-9198。請務必於購買產品後妥善保管發票及保固卡以及電源線上面黏貼的雷射標籤，並於提出保固申請時提供完整的資料。（建議發票及保固卡可拍照留存）

本產品保固只適用於購自ghd授權零售商的原廠產品，為保證消費者的利益，請從授權通路購買原廠產品。注意：若產品電源線上的雷射標籤條碼被剪掉、擦除、損壞或修改，本保證將會失效。但此不會影響您的法律權益。*製造日期碼請見電源線上標籤指示：前六碼為製造日期碼西元年月日(各兩碼)第7至11碼為製造批號。

Jemella集團及其代理商均不為其任何電器產品提供更換零件。若有其它疑問，請前往www.ghdhair.com網站或聯絡總代理商派力國際股份有限公司尋求協助。

回收與處理

本產品為“電子或電器產品”，當不再使用需廢棄產品時，必須與家庭廢棄物分開處理。當產品不再使用時，請依照您當地的法規來妥善處理您的ghd產品。更多資訊，請與當地環保機構瞭解詳情。

派力國際股份有限公司為ghd/Jemella集團所指定台灣總代理。

地址：110台北市信義區松高路1號3樓

電話：02-8786-9198



ghdhair.com

ghd 與 ghd 皆為 Jemella Group Limited 的註冊商標。

© Jemella Group Limited 2024

chronos curve

於英國劍橋設計，中國生產製造。

專利申請中。

設備名稱：捲髮棒 Equipment name		型號（型式）： CLT263 Type designation (Type)				
單元 Unit	限用物質及其化學符號 Restricted substances and its chemical symbols					
	鉛Lead (Pb)	汞Mercury (Hg)	鎘Cadmium (Cd)	六價鉻 Hexavalent chromium (Cr ⁺⁶)	多溴聯苯 Polybrominated biphenyls (PBB)	多溴二苯醚 Polybrominated diphenyl ethers (PBDE)
電源線材	○	○	○	○	○	○
電路板	○	○	○	○	○	○
加熱元件	○	○	○	○	○	○
外殼塑料	○	○	○	○	○	○
備考1. “超出0.1 wt %” 及 “超出0.01 wt %” 係指限用物質之百分比含量超出百分比含量基準值。 Note 1 : “Exceeding 0.1 wt %” and “exceeding 0.01 wt %” indicate that the percentage content of the restricted substance exceeds the reference percentage value of presence condition.						
備考2. “○” 係指該項限用物質之百分比含量未超出百分比含量基準值。 Note 2 : “○” indicates that the percentage content of the restricted substance does not exceed the percentage of reference value of presence.						
備考3. “—” 係指該項限用物質為排除項目。 Note 3 : The “—” indicates that the restricted substance corresponds to the exemption.						

設備名稱：捲髮棒 Equipment name		型號（型式）： CLT323 Type designation (Type)				
單元 Unit	限用物質及其化學符號 Restricted substances and its chemical symbols					
	鉛Lead (Pb)	汞Mercury (Hg)	鎘Cadmium (Cd)	六價鉻 Hexavalent chromium (Cr ⁺⁶)	多溴聯苯 Polybrominated biphenyls (PBB)	多溴二苯醚 Polybrominated diphenyl ethers (PBDE)
電源線材	○	○	○	○	○	○
電路板	○	○	○	○	○	○
加熱元件	○	○	○	○	○	○
外殼塑料	○	○	○	○	○	○
備考1. “超出0.1 wt %”及“超出0.01 wt %”係指限用物質之百分比含量超出百分比含量基準值。 Note 1 : “Exceeding 0.1 wt %” and “exceeding 0.01 wt %” indicate that the percentage content of the restricted substance exceeds the reference percentage value of presence condition.						
備考2. “○”係指該項限用物質之百分比含量未超出百分比含量基準值。 Note 2 : “○” indicates that the percentage content of the restricted substance does not exceed the percentage of reference value of presence.						
備考3. “—”係指該項限用物質為排除項目。 Note 3 : The “—” indicates that the restricted substance corresponds to the exemption.						

設備名稱：捲髮棒 Equipment name		型號（型式）： CTWA23 Type designation (Type)				
單元 Unit	限用物質及其化學符號 Restricted substances and its chemical symbols					
	鉛Lead (Pb)	汞Mercury (Hg)	鎘Cadmium (Cd)	六價鉻 Hexavalent chromium (Cr ⁺⁶)	多溴聯苯 Polybrominated biphenyls (PBB)	多溴二苯醚 Polybrominated diphenyl ethers (PBDE)
電源線材	○	○	○	○	○	○
電路板	○	○	○	○	○	○
加熱元件	○	○	○	○	○	○
外殼塑料	○	○	○	○	○	○
備考1. “超出0.1 wt %” 及 “超出0.01 wt %” 係指限用物質之百分比含量超出百分比含量基準值。 Note 1 : “Exceeding 0.1 wt %” and “exceeding 0.01 wt %” indicate that the percentage content of the restricted substance exceeds the reference percentage value of presence condition. 備考2. “○” 係指該項限用物質之百分比含量未超出百分比含量基準值。 Note 2 : “○” indicates that the percentage content of the restricted substance does not exceed the percentage of reference value of presence.						
備考3. “—” 係指該項限用物質為排除項目。 Note 3 : The “—” indicates that the restricted substance corresponds to the exemption.						

設備名稱：捲髮棒 Equipment name		型號（型式）： CRW383 Type designation (Type)				
單元 Unit	限用物質及其化學符號 Restricted substances and its chemical symbols					
	鉛Lead (Pb)	汞Mercury (Hg)	鎘Cadmium (Cd)	六價鉻 Hexavalent chromium (Cr ⁺⁶)	多溴聯苯 Polybrominated biphenyls (PBB)	多溴二苯醚 Polybrominated diphenyl ethers (PBDE)
電源線材	○	○	○	○	○	○
電路板	○	○	○	○	○	○
加熱元件	○	○	○	○	○	○
外殼塑料	○	○	○	○	○	○
備考1. “超出0.1 wt %”及“超出0.01 wt %”係指限用物質之百分比含量超出百分比含量基準值。 Note 1 : “Exceeding 0.1 wt %” and “exceeding 0.01 wt %” indicate that the percentage content of the restricted substance exceeds the reference percentage value of presence condition. 備考2. “○”係指該項限用物質之百分比含量未超出百分比含量基準值。 Note 2 : “○” indicates that the percentage content of the restricted substance does not exceed the percentage of reference value of presence. 備考3. “—”係指該項限用物質為排除項目。 Note 3 : The “—” indicates that the restricted substance corresponds to the exemption.						

EN

register your guarantee

For peace of mind styling with your new ghd product, register your guarantee today for:

- Verification of the authenticity of your ghd product
- Replacement should your ghd product fail within the guarantee period*
- Exclusive offers and deals before anyone else
- The latest news and trends first



Visit ghdhair.com/register or use your QR reader on your smartphone to validate.

This does not affect your statutory rights.
*Conditions apply, see safety instructions

TW

啟動保固生效

為求安心保固，請您在收到貨後執行以下動作：

- 確認所購買的產品為ghd授權通路所提供的真貨。
- 確認保卡上資料的完整性，並蓋銷售地點店章及填寫購買日期：西元年月日並妥善管。務必妥善保管。以獲得保固權益*。

* 請務必詳讀重要安全使用守則之注意事項。