

Not to be reproduced



Register your product guarantee today!
See page 7 for info.



chronos max

Professional styler

important safety instructions,
manufacturer's guarantee and
how to register your product

110324 99500000132

Not to be reproduced

contents

EN English	3 - 8
Validate your guarantee	7

important safety instructions

To reduce the risk of burns, electrocution, fire, or injury to persons, read and follow these safety instructions before using your ghd chronos max styler.

This ghd chronos max styler is for use only as a hairstyling aid, and only with products specifically designed for use with a heated hairstyling aid such as a ghd heat mat.

Handling your ghd chronos max styler

The ghd chronos max styler contains high-tech, sensitive components therefore please ensure that the product is not dropped. Do not insert foreign objects, paint, burn or disassemble your ghd chronos max styler. Do not use your ghd chronos max styler if it has been damaged – for example if the styler casing is cracked. If your product is damaged through misuse or abuse, this will not be covered under your guarantee. This does not affect your statutory rights.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental

capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved, by a person responsible for their safety.

Children shall not play with the appliance. Cleaning and user maintenance shall not be

made by children without supervision.

BURN HAZARD: Keep appliance out of reach from children, particularly during use and during cool down after use.

When the appliance is connected to a power supply never leave it unattended.

The ghd chronos max styler is not suitable for use with synthetic hair or wigs. It is possible that colour may permanently transfer onto the styler if used on dyed hair.

warning: keep away from water

Do not use this device in a bathtub, shower, or water filled reservoir.

1. When the appliance is used in a bathroom, unplug it after use since the proximity of water



presents a hazard even when the appliance is switched off.

2. For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30mA is advisable in the electric circuit supplying

the bathroom. Ask your installer, or a qualified electrician, for advice.

3. Do not reach for the appliance if it has fallen into water.

4. Do not spray or apply wet styling aids directly onto the ghd chronos max styler.

5. Always place the appliance with the stand, if any, on a heat-resistant, stable flat surface

warning: electricity

As with most electrical appliances, electrical parts are electrically live even when the switch is off.

To reduce the risk of electrocution:

Never operate this appliance if it is not working properly, or if it has a damaged power cord or plug. If the power

cord or plug is damaged, it must be replaced by Jemella Ltd.

1. Only use with 100-240V~ 50-60Hz power supply.
2. The appliance should never be left unattended when plugged in.
3. Keep the power cord away from heated surfaces. Do not wrap the power cord around the appliance. Do not hang the ghd chronos max styler by the power cord.
4. Always unplug the ghd chronos max styler immediately after using.
5. Do not use an extension power cord with this appliance.
6. Do not use a voltage inverter or generator with this appliance.
7. Your ghd product is a class II electrical appliance and should not be connected to an earth connection.

warning: hot surfaces

The ghd chronos max styler heater plates are hot for styling.


To reduce the risk of burns:

1. NEVER touch the styler heater plates
2. Avoid holding or touching the styler beyond the raised finger guard.

3. When not styling always lay the ghd chronos max styler on a flat heat-resistant surface such as a ghd styler heat mat.
4. When styling is complete, always switch off the ghd chronos max styler and unplug it from the power supply.
5. Wait for the ghd chronos max styler to cool before storing.
6. After styling the plates remain hot – for safe cooling cover the plates with the heatproof plate guard.
7. When the ghd chronos max styler has cooled, fold the power cord in the same way as it was first delivered in its packaging. Do not wind it around your hand or the body of the ghd chronos max styler as this can lead to early failure of the power cord.

operation

Ensure that hair is completely dry before using the ghd chronos max styler

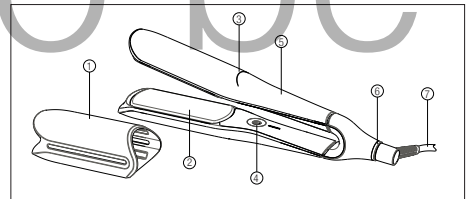

- ① Heatproof plate guard
- ② Styler heater plates
- ③ Raised finger guard. Avoid holding or touching the styler beyond this feature.
- ④ On/Off Switch and indicator light
- ⑤ Body
- ⑥ Rear light
- ⑦ Power cord

1. Plug the ghd chronos max styler into the power supply. The ghd chronos max styler will momentarily flash once around the ON/OFF switch and at the rear light to indicate that it is connected to a power supply and is in standby mode.
2. To turn on the ghd chronos max styler, press and hold the ON/OFF button for at least 1 second. The ghd chronos max styler will play a short start-up tune and both lights will pulse to indicate that the styler is heating up.
3. **IMPORTANT:** the ghd chronos max styler reaches the required temperature in seconds, so be careful not to touch the heater plates. Once the ghd chronos max styler has reached temperature, it will beep and the lights will remain illuminated to indicate that it is ready to use.
4. To indicate when the ghd chronos max styler is operating in High Definition Predictive mode, the rear light will quickly pulse from dim to bright until the unit senses that the styling session is complete.
5. When you have finished your styling session, press and hold the ON/OFF button until the ghd chronos max styler plays the shut-down tune. Once turned OFF, unplug the ghd chronos max styler from the power supply and allow it to cool in a safe place.

Your ghd styler is not only attractive to you, but also to your children. Please ensure you always store your ghd styler out of reach of children, particularly during use, especially when cooling.

For safe cooling, cover the plates with the heatproof plate guard. **WARNING: even with the plate guard on, the styler heater plates are still very hot, do not touch the plates or allow children or those with reduced physical, sensory or mental capabilities, or lack of experience and knowledge to touch the styler whilst it is cooling.**

the ghd chronos max styler has the following safety features:

1. **Sleep mode:** if the ghd chronos max styler has been left on and has not been used for 10 minutes, a safety feature will automatically turn the styler off. The

styler will play the shut-down tune, the heating plates will start to cool and the light will slowly pulse until the plates reach a safe temperature.

- a. To re-start the ghd chronos while it is in sleep mode, simply press and hold the ON/OFF button for at least 1 second until the start-up tune sounds.
 - b. Note that although the ghd chronos styler is turned off, it is still connected to the mains and should be unplugged from mains electricity at the earliest opportunity.
2. **Protect Mode:** The ghd chronos styler can protect itself against adverse events or power fluctuations, for safety the heaters will turn off, the ghd chronos styler will emit a beep and the light will flash white every five seconds. If this occurs un-plug and re-plug at the power supply and then re-start.
 3. **Fail safe:** in the unlikely event of a control system error, for safety the heaters will turn off, the ghd chronos styler will emit beeps and the light will flash red every 5 seconds. If this occurs switch off the ghd chronos styler at the power supply and re-start. If the unit does not re-start or the problem persists, contact ghd Customer Service for advice.

user maintenance instructions

Cleaning your ghd chronos max styler

1. Unplug the ghd chronos max styler from the mains power supply.
2. Always allow the ghd chronos max styler to cool before attempting to clean it.
3. Never immerse the appliance in water.
4. Wipe the outside of the ghd chronos max styler with a damp cloth. Do not use sharp or abrasive detergents or corrosive products.

Storage

- 1. Always allow the ghd chronos max styler to cool down before storing away.
- 2. When the ghd chronos max styler has cooled down, fold the power cord in the same way as it was first delivered in its packaging. Do not wrap the supply cord around the ghd chronos max styler as this can strain the cord and cause premature supply cord failure

failure to operate

Your ghd styling appliance is a high performance product and if the unit is subjected to large fluctuation in mains power during use it may go into fail-safe mode to protect the unit from damage. Therefore, in the unlikely event that your ghd product does not operate correctly, check that your ghd product and mains power supply are switched on, and that power is available.

If your product stops working and the red fault light flashes, please follow the procedure below:

- 1. Switch off the unit
- 2. Unplug the unit from the plug socket
- 3. Wait for 5 seconds and then plug the unit back into the wall
- 4. Switch the unit back on

If this occurs repeatedly, please contact your local ghd service centre.

If in doubt or for further advice, please visit the help section of ghdhair.com or contact an approved ghd stockist or contact ghd Customer Service for further advice.

manufacturer's guarantee

All ghd electrical products are individually tested before leaving the factory. However in the unlikely event of your ghd chronos max styler proving defective due to faulty workmanship or materials, then, at its sole discretion, ghd will replace the product at no charge with an identical or equivalent product within two years* from the original date of purchase. A replacement product assumes the remaining guarantee of the original product or 180 days, whichever provides longer coverage for you. When a product is exchanged, any replacement item becomes your property and the replaced item becomes property of ghd.



To claim under this guarantee please visit 'ghdhair.com/returns' and follow the onscreen instructions to complete your return. Please ensure that you include a proof of purchase with any returned product. Therefore, please ensure you keep your proof of purchase in a safe place.

*Two years globally.

This guarantee only applies to genuine ghd products purchased through ghd-approved stockists, and does not cover products repaired or serviced by anyone other than ghd personnel or ghd representatives. Note that this guarantee may be invalidated where serial numbers or identification have been erased, damaged or modified. This does not affect your statutory rights.

validate your guarantee

In order to verify the authenticity of your ghd product:

Visit ghdhair.com/register or scan QR code. If you can successfully register your product, then your ghd product is authentic.

This does not affect your statutory rights. For replacement should your ghd product fail within the guarantee period, conditions apply, see safety instructions.

*Neither Jemella Group Limited nor its subsidiaries provides replacement parts for any of its electrical units.

If you do not have access to the internet please return your ghd electrical product to the closest ghd address as printed in this leaflet or on the packaging, together with your proof of purchase.

recycling and disposal

Your ghd electrical product is classified as 'electrical or electronic equipment'

and must not be disposed of with other household or commercial waste at the end of its working life. When you have no further use for your ghd product, please dispose of it according to your local authority's recycling procedure. For more information contact your local authority.

UK/EU only

Your ghd electrical product should be disposed of in accordance with the WEEE directive (Waste Electrical and Electronic Equipment 2002/96/EC), which ensures that products are recycled using the best available methods and practices to minimise any potential damage to the environment. For more information, contact your local authority or the retailer from whom you purchased this product.

compliance

This ghd chronos max styler is compliant with BS EN 60335-2-23 and carries the CE and UKCA marks. Other approvals include the USA, Australia/ New Zealand and South Africa.

Jemella Ltd

ghd UK

ghd UK: 01924 423 400

ghd Republic of Ireland: +44 1924 423 400

ghd Returns



ghd
Phase 1
Caverswall House
Sherwood Business Park
Annesley
Nottingham
NG15 0DJ

ghdhair.com

ghd and ghd are registered trade marks of Jemella Group Limited.

© Jemella Group Limited 2024

Designed in Cambridge, UK. Made in China.

Model number: S8M421

100-240V ~ 50-60Hz 130-105W

validate your warranty

For peace of mind styling with your new ghd product, register your guarantee today for:

- Verification of the authenticity of your ghd product
- Replacement should your ghd product fail within the guarantee period*
- Exclusive offers and deals before anyone else
- The latest news and trends first

Visit ghdhair.com/register or use your QR reader on your smartphone to validate.

This does not affect your statutory rights.

*For replacement should your ghd product fail within the guarantee period, conditions apply, see safety instructions.