

Not to be reproduced

EN

Register your product guarantee today! See page 15 for info.

CN

請立即進行產品註冊或妥善保管您的產品保固卡，以啟動產品保固，詳情請見第15頁

070526 99500001042

 **Sculpt**
Professional styler

important safety instructions,
manufacturer's guarantee and
how to register your product

重要安全使用說明・製造商產
品註冊與保固資訊，以及產品
保卡使用指南

Not to be reproduced

contents

內容

EN English	3 - 8
Validate your guarantee	15
TW 中文	9 - 14
啟動產品保固註冊	15

important safety instructions

To reduce the risk of burns, electrocution, fire, or injury to persons, read and follow these safety instructions before using your ghd sculpt styler.

This ghd sculpt styler is for use only as a hairstyling aid, and only with products specifically designed for use with a heated hairstyling aid such as a ghd heat mat.

Handling your ghd sculpt styler

The ghd sculpt styler contains high-tech, sensitive components therefore please ensure that the product is not dropped. Do not insert foreign objects, paint, burn or disassemble your ghd sculpt styler. Do not use your ghd sculpt styler if it has been damaged – for example if the styler casing is cracked. If your product is damaged through misuse or abuse, this will not be covered under your guarantee. This does not affect your statutory rights

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or

lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

BURN HAZARD: Keep appliance out of reach from

children, particularly during use and during cool down after use.

When the appliance is connected to a power supply never leave it unattended.

The ghd sculpt styler is not suitable for use with synthetic hair
It is possible that colour may permanently transfer onto the styler if used on dyed hair.

warning: keep away from water

Do not use this device in a bathtub, shower, or water filled reservoir.



1. When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.

2. For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30mA is advisable in the electric circuit supplying the bathroom. Ask your installer, or a qualified electrician, for advice.

3. Do not reach for the appliance if it has fallen into water.

4. Do not spray or apply wet styling aids directly onto the ghd sculpt styler.

5. Always place the appliance with the stand, if any, on a heat-resistant, stable flat surface.

warning: electricity

As with most electrical appliances, electrical parts are electrically live even when the switch is off.

To reduce the risk of electrocution:

Never operate this appliance if it is not working properly, or if it has a damaged power cord or plug. If the power cord or plug is damaged, it must be replaced by Jemella Ltd.

1. Only use with 100–240V, 50-60 Hz power supply.
2. The appliance should never be left unattended when plugged in.
3. Keep the power cord away from heated surfaces. Do not wrap the power cord around the appliance. Do not hang the ghd sculpt styler by the power cord.

4. Always unplug the ghd sculpt styler immediately after using.
5. Do not use an extension power cord with this appliance.
6. Do not use a voltage inverter or generator with this appliance.
7. Your ghd product is a class II electrical appliance and does not require an earth connection.



warning: hot surfaces


The ghd sculpt styler heater plates are hot for effective styling.

To reduce the risk of burns:

1. NEVER touch the styler heater plates
2. Avoid holding or touching the styler beyond the raised finger guard.
3. When not styling, always lay the ghd sculpt styler on a flat heat-resistant surface such as a ghd styler heat mat.
4. When styling is complete, always switch off the ghd sculpt styler and unplug it from the power supply.
5. Wait for the ghd sculpt styler to cool before storing.
6. After styling, the plates remain hot – for safe cooling cover the plates with the heatproof plate guard.
7. When the ghd sculpt styler has cooled, fold the power cord in the same way as it was first delivered in its packaging. Do not wind it around your hand or the body of the ghd sculp styler as this can lead to early failure of the power cord.

operation

Ensure that hair is completely dry before using the ghd sculpt styler.

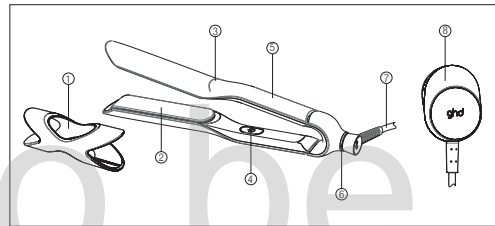

- | | |
|--|------------------------|
| ① Heatproof plate guard | ⑥ Rear indicator light |
| ② Styler heater plates | ⑦ Power cord |
| ③ Raised finger guard. Avoid holding or touching the styler beyond this feature. | ⑧ Plug |
| ④ Switch and indicator light: power and device status | |
| ⑤ Body | |

1. Plug the ghd sculpt styler into the power supply. The ghd sculpt styler will momentarily flash once around the ON/OFF switch and at the rear light to indicate that it is connected to a power supply and is in standby mode.
2. To turn on the ghd sculpt styler, press and hold the ON/OFF button. The ghd sculpt styler will play a short start-up tune and both lights will pulse to indicate that the styler is heating up.
3. **IMPORTANT:** the ghd sculpt styler reaches the required temperature in seconds, so be careful not to touch the heater plates. Once the ghd sculpt styler has reached temperature, it will bleep and the lights will remain illuminated to indicate that it is ready to use.
4. When you have finished your styling session, press and hold the ON/OFF button until the ghd sculpt styler plays the shut-down tune. Once turned OFF, unplug the ghd sculpt styler from the power supply and allow it to cool in a safe place.

Your ghd styler is not only attractive to you, but also to your children. Please ensure you always store your ghd styler out of reach of children, particularly

during use, especially when cooling.

For safe cooling, cover the plates with the heatproof plate guard.

WARNING: even with the plate guard on, the styler heater plates are still very hot, do not touch the plates or allow children or those with reduced physical, sensory or mental capabilities, or lack of experience and knowledge to touch the styler whilst it is cooling.

the ghd sculpt styler has the following safety features:

1. **Sleep mode:** if the ghd sculpt styler has been left on and has not been used for 10 minutes, a safety feature will automatically turn the styler off. The styler will play the shut-down tune, the heating plates will start to cool and the light will slowly pulse until the plates reach a safe temperature.
 - a. To re-start the ghd sculpt while it is in sleep mode, simply press and hold the ON/OFF button until the start-up tune sounds.
 - b. Note that although the ghd sculpt styler is turned off, it is still connected to the mains and will consume 0.3W. Please unplug from mains electricity at the earliest opportunity.
2. **Protect Mode:** The ghd sculpt styler can protect itself against adverse events or power fluctuations, for safety the heaters will turn off, the ghd sculpt styler will emit a bleep and the light will flash white every five seconds. If this occurs un-plug and re-plug at the power supply and then re-start.

3. **Fail safe:** in the unlikely event of a control system error, for safety the heaters will turn off, the ghd sculpt styler will emit bleeps and the light will flash red every 5 seconds. If this occurs switch off the ghd sculpt styler at the power supply and re-start. If the unit does not re-start or the problem persists, contact ghd Customer Service for advice.

user maintenance instructions

Cleaning your ghd sculpt styler

1. Unplug the ghd sculpt styler from the mains power supply.
2. Always allow the ghd sculpt styler to cool before attempting to clean it.
3. Never immerse the appliance in water.
4. Wipe the outside of the ghd sculpt styler with a damp cloth. Do not use sharp or abrasive detergents or corrosive products.

Storage

1. Always allow the ghd sculpt styler to cool down before storing away.
2. When the ghd sculpt styler has cooled down, fold the power cord in the same way as it was first delivered in its packaging. Do not wrap the supply cord around the ghd sculpt styler as this can strain the cord and cause premature supply cord failure.

failure to operate

Your ghd styling appliance is a high performance product and if the unit is subjected to large fluctuation in mains power during use it may go into fail-safe mode to protect the unit from damage. Therefore, in the unlikely event that your ghd product does not operate correctly, check that your ghd product and mains power supply are switched on, and that power is available.

If your product stops working and the red fault light flashes, please follow the procedure below:

1. Switch off the unit
2. Unplug the unit from the plug socket
3. Wait for 5 seconds and then plug the unit back into the wall
4. Switch the unit back on

If this occurs repeatedly, please contact your local ghd service centre.

For UK plugs, please ensure that the fitted fuse is intact and functioning; if it is not replace it with an identically rated British Standard Fuse.

If in doubt or for further advice, please visit the help section of ghdhair.com or contact an approved ghd stockist or contact ghd Customer Service for further advice.

manufacturer's guarantee

All ghd electrical products are individually tested before leaving the factory. However in the unlikely event of the product proving defective due to faulty workmanship or materials, then, at its sole discretion, ghd will replace the product at no charge with an identical or equivalent product within two years from the original date of purchase. A replacement product assumes the remaining guarantee of the original product or 180 days, whichever provides longer coverage for you. When a product is exchanged, any replacement item becomes your property and the replaced item becomes property of ghd.

To claim under this guarantee please visit 'ghdhair.com/returns' and follow the onscreen instructions to complete your return. Please ensure that you include a proof of purchase with any returned product. Therefore please ensure you keep your proof of purchase in a safe place.

This guarantee only applies to genuine ghd products purchased through ghd-approved stockists, and does not cover products repaired or serviced by anyone other than ghd personnel or ghd representatives. Note that this guarantee may be invalidated where serial numbers or identification have been erased, damaged or modified. This does not affect your statutory rights.



*Neither Gemella Group Limited nor its subsidiaries provides replacement parts for any of its electrical units. If you do not have access to the internet please return your ghd electrical product to the closest ghd address as printed in this leaflet or on the packaging, together with your proof of purchase. For customers in Australia and New Zealand, please phone your closest ghd office on the number printed in this leaflet.

Australia only

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

recycling and disposal

Your ghd electrical product is classified as 'electrical or electronic equipment' and **must not be disposed of with other household or commercial waste at the end of its working life**. When you have no further use for your ghd product, please dispose of it according to your local authority's recycling procedure. For more information contact your local authority.

UK/EU only

Your ghd electrical product should be disposed of in accordance with the WEEE directive (Waste Electrical and Electronic Equipment 2002/96/EC), which ensures that products are recycled using the best available methods and practices to minimise any potential damage to the environment. For more information, contact your local authority or the retailer from whom you purchased this product.

ghd UK Jemella Ltd

ghd UK: 01924 423 400
ghd Republic of Ireland: +44 1924 423 400

ghd Returns

Phase 1
Caverswall House
Sherwood Business Park
Annesley
Nottinghamshire
NG15 0DJ

Jemella Australia Pty Ltd

ghd Australia: 1300 443 424

ghd Australia

PO Box 15516, City East, Queensland 4002, Australia

ghd South Africa (Proprietary) Ltd

ghd South Africa: 086 010 9366

ghd South Africa

PO Box 818, Gillitts, 3603, South Africa

Jemella New Zealand Ltd

ghd New Zealand: 0800 880 209

ghd New Zealand

Private Bag 211030,
Returns Centre
Auckland 2154



ghdhair.com

ghd and ghd are registered trade marks of Gemella Group Limited.

© Gemella Group Limited 2026.

Designed in Cambridge, UK. Made in China.

重要安全使用守則

為避免錯誤操作而導致燙傷、觸電、火警及其它個人傷害，使用本產品前請認真閱讀及遵照以下安全說明。

本產品僅只適用於頭髮造型使用，並且只適用於搭配專為造型工具特別設計的耐熱產品，如ghd的隔熱收納袋一起使用。

ghd sculpt 造型夾操作方法

ghd sculpt造型夾內裝高精密感應零件，請務必小心使用，切勿碰撞或摔落本產品，以避免內部零件受損；同時切記禁止異物插入、塗畫、烙印或拆裝產品。若產品被毀損，例如表面產生裂痕時，請立即停止使用。任何人為使用不當或濫用所導致的產品故障，將不列入產品保固的範圍。此保固條款不影響您依法享有的消費者權益。

本產品不適合兒童及肢體、感官或精神上有殘疾者、或缺乏經驗和知識的對象獨自使用，除非在專

人指導或監督，且對使用者安全承擔責任的情況下方能使用。

請監督兒童，確保不會把本產品當作玩具。本產品在缺乏監督的情況下，不得由兒童進行清潔及維護。

燒傷危險：請將本產品放在兒童接觸不到的地方，特別是在使用過程中和使用後的冷卻過程中。

在無人看管的情況下，請將本產品的插頭拔除。切勿連接電源。

本產品不適用於人造假髮。

若用於染色髮，染料可能會經由高溫附著於本產品上。

警告：請遠離水源

不要在浴室、浴缸、洗臉盆或任何可能接觸到水的地方使用本產品。



1. 當電器於浴室中使用時，使用後請務必拔除電源插頭。即使已關閉電源，任何可能接觸到水的地方也會產生危險。(依台灣法規，嚴禁在浴室或任何可能接觸到水的環境中使用電器。)

2. 為提供額外保護，建議安裝額定漏電電流不超過30mA 的漏電斷路器

(RCD)。請務必遵循當地相關法規，並諮詢您的安裝技術人員或合格電工以獲得專業建議。

3. 萬一產品不小心掉入水中時，請勿再觸碰或伸手撈取。

4. 請勿將任何造型品或護髮產品直接噴灑或塗抹在本產品上。

5. 無論有無使用本產品，請務必正確擺放及存放，使用中與使用後冷卻時，請務必置於可耐熱且穩固的平面上，如ghd隔熱墊。

警告：小心觸電

如同大多數電器產品，即使電源開關已關閉，部份零件仍為處於待機通電狀態。

為降低觸電風險，請遵守以下事項：

如電源線或插頭有損壞，或產品不正常運行時，請立即停止使用。並於保固

期內，請向原購買處或總代理商派力國際股份有限公司進行產品保固服務。請勿自行修理或更換。

1. 請依照產品標示規格使用電源。
2. 無人看管時，應拔掉插頭。
3. 請勿將電源線放置於任何有熱度的表面。請勿將電源線纏繞於本產品上或用電源線懸掛本產品。
4. 每次使用後，請立即拔除電源插頭。
5. 請勿將本產品與電源延長線一起使用。
6. 請勿將本產品與電壓轉換器或電源變壓器一起使用。
7. 本產品為II類電器，不需接地使用。



警告：小心高溫表面

為有效達到造型效果，使用過程中本產品會產生高溫。


為防止燙傷或灼傷，請務必遵守以下安全事項：

1. 切勿直接觸碰加熱板。
2. 凸起線以上靠近加熱板，溫度較高，請避免手指觸碰。

3. 當中途停止操作時或產品使用完畢後，請務必將本產品放在平坦且耐熱的表面上，例如ghd專用造型夾隔熱墊。
4. 每次造型結束後，請務必關閉開關並拔掉插頭。
5. 使用完畢後，請靜置本產品讓其完全冷卻再進行收納。
6. 造型完畢後，由於產品本身具高溫且仍處於加熱狀態，先將造型夾置於耐熱表面上冷卻，靜待3分鐘後再使用其專屬的造型夾防熱保護套將造型夾套上。
7. 待冷卻後，請依原包裝方法收納電源線。請切勿將電源線纏繞於手把上或機身上，這將可能造成電源線提早損壞。

操作方式：

使用本產品前，請確保頭髮已經完全乾燥。

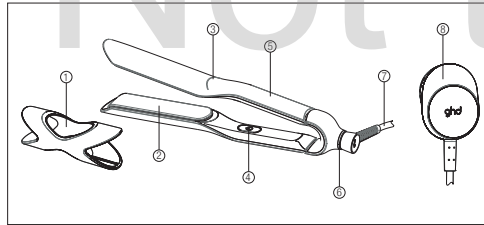

- | | |
|---------------------------|--------------|
| ① 造型夾防熱保護套 | ⑥ 後方指示燈 (尾燈) |
| ② 造型夾加熱面板 | ⑦ 電源線 |
| ③ 凸起線。超過標線位置溫度較高，避免手指觸碰 | ⑧ 插頭 |
| ④ 電源開關與指示燈：顯示電源狀態、裝置運作狀態。 | |
| ⑤ 機身 | |

1. 將ghd造型夾的插頭插入電源插座。造型夾的開關及尾端的指示燈會閃爍一次，表示已成功連接電源並進入待機模式。
2. 長按電源開關1秒以上即可啟動預熱，同時將會發出很短的啟動聲響，接著電源指示燈與尾燈都會持續閃爍，這表示造型夾正在加熱。
3. **重要：**ghd造型夾在短短幾秒內即可預熱完成，請小心避免觸碰加熱板以防燙傷！一旦預熱完成達到系統設定溫度，裝置將發出提示音，並且指示燈將持續亮起，表示已準備就緒，可開始使用。
4. 使用完畢時，只要長按開關2秒以上至造型夾發出一聲關閉提示音以關閉造型夾。關閉電源後請立即拔出插頭，並放置於安全處等待冷卻。因為面板仍處於加熱的狀態，為確保安全，請在冷卻時，先將造型夾置於耐熱表面上冷卻，靜待3分鐘後再將造型夾防熱保護套套上。

我們相信本產品不僅會引起你的興趣，同時也會引起小孩的好奇心。請務必將本產品放置於兒童接觸不到之空間，尤其是在使用過程時，以及產品冷卻過程中。

為確保安全，請在冷卻時，確保電源已關閉，插頭已拔除。由於產品本身具高溫且仍處於加熱狀態，先將造型夾置於耐熱表面上冷卻，靜待3分鐘後再使用其專屬的防熱保護套將本產品套上進行冷卻。

注意：當造型夾正在冷卻時，即使套上了防熱保護套，本產品溫度依然很高，請勿用手觸摸加熱板，也請勿讓兒童、肢體、感官或精神能力較弱或缺乏經驗和知識的人士在產品冷卻期間觸摸本產品。

ghd 造型夾具有下列安全功能：

1. **睡眠模式：**本產品在啟動狀態下若超過10分鐘未使用，本產品會發出聲響並自動關閉開始進入睡眠模式，接著產品會開始進行降溫冷卻，同時指示燈會慢速閃動，直到加熱板冷卻至安全溫度。
 - a. 若進入睡眠模式後欲重新啟動本產品，只要將開關按鈕長按一秒以上即可重新開啟。
 - b. 請注意，即使本產品開關已關閉，由於仍然連接電源，功率消耗為 0.3W。為確保安全，請儘快拔掉電源插頭，並待冷卻後妥善收納。
2. **故障保護：**若不幸遇到控制系統失靈，基於安全考量，加熱功能會自動關閉，並會發出急促的“嗶”聲，同時電源指示燈會以紅光的方式每五秒持續閃動一次。此時可以先關機再重新啟動電源。若無法重新啟動電源或狀況持續發生無法改善，請聯絡ghd客戶服務部尋求協助。

產品維護說明

ghd 造型夾清潔須知

1. 清潔前，務必關閉電源及拔掉插頭。
2. 清潔前，請確保本產品已經完全冷卻。
3. 切勿將產品浸入水中清潔。
4. 請使用濕棉布清潔造型夾表面，並立即抹乾。切勿使用具腐蝕性的清潔劑，以及使用尖銳或粗糙材質擦拭本產品。

存放須知

1. 使用完畢後，須待本產品完全冷卻後再存放。
2. 待冷卻後，請按原包裝方法摺疊收納電源線。請勿將電源線纏繞於手把或機身上，以防止過度拉扯電源線所導致的提早損壞。

操作故障

由於本產品為精密儀器，若在使用時電流量落差太大時，產品會即刻進入故障保護模式以保護產品避免受損。因此，若本產品未能正常運作，請確認電源開關是否開啟，電力是否正常供應。

若產品無法正常操作，電源紅色指示燈不斷閃動時，請按照以下流程操作：

1. 關機
2. 拔下插頭
3. 等待5秒後再重新將插頭連接插座
4. 開機

若經常出現操作故障的情況時，請洽ghd客戶服務部。

若有其它疑問，請前往www.ghdhair.com網站或ghd客戶服務中心或聯絡台灣總代理商派力國際股份有限公司尋求協助。

產品保固



線上的雷射標籤與條碼被剪掉、擦除、損毀或修改，則本保固將失效。但不影響您依法享有的法定權益。

*製造日期碼請見電源線上標籤指示: 前六碼為製造日期碼西元年
月日(各兩碼)第7至11碼為製造批號。

Jemella集團及其代理商均不為其任何電器產品提供零件更換服務。若有其它疑問，請前往www.ghdhair.com網站或ghd客戶服務中心或聯絡總代理商派力國際股份有限公司尋求協助。

回收與處理

本產品為“電器及電子產品”，當不再使用需廢棄產品時，必須與家庭廢棄物分開處理。當產品不再使用時，請依照您當地的法規來妥善處理您的ghd產品。更多資訊，請與當地環保機構瞭解詳情。

派力國際股份有限公司為 ghd/Jemella集團所指定台灣總代理。
地址：110台北市信義區松高路1號3樓
電話：02-8786-9198



ghdhair.com

ghd 與 ghd 皆為 Jemella Group Limited 的註冊商標。

© Jemella Group Limited 2026

於英國劍橋設計，中國生產製造。

14

EN

validate your guarantee

For peace of mind styling with your new ghd product,
register your guarantee today for:

- Verification of the authenticity of your ghd product
- Replacement should your ghd product fail within the guarantee period*
- Exclusive offers and deals before anyone else
- The latest news and trends first



Visit ghdhair.com/register or use
your QR reader on your smartphone
to validate.

This does not affect your statutory rights.
*conditions apply, see safety instructions

CN

啟動保固生效

確認所購買的產品為ghd授權通路所提供的真貨。

- 確認所購買的產品為ghd授權通路所提供的真貨
- 確認保卡上資料的完整性，並蓋銷售地點店章及填寫購買日期：西元年月日並妥善管。務必妥善保管。以獲得保固權益*。



* 請務必詳讀重要安全使用守則之注意事項。

Not to be reproduced